

Soul Shiver

Multi Modulation Pedal

Owner's Manual

Precautions

PLEASE READ CAREFULLY BEFORE PROCEEDING

Power Supply

Please connect the designated AC adapter to an AC outlet of the correct voltage. Please be sure to use only an AC adapter which supplies 9V (±10%) DC, center minus. The maximum working voltage shall not exceed 12V, otherwise may be dangerous equipment damage, fire or other problems.

Unplug the AC power adapter when not using or during electrical storms.

Connections

Always turn off the power of this and all other equipment before connecting or disconnecting, this will help prevent malfunction and / or damage to other devices. Also make sure to disconnect all connection cables and the power cord before moving this unit.

Cleaning

Clean only with a soft, dry cloth. If necessary, slightly moisten the cloth. Do not use abrasive cleanser, cleaning alcohol, paint thinners, wax, solvents, cleaning fluids, or chemical-impregnated wiping cloths.

Interference with other electrical devices

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

Location

To avoid deformation, discoloration, or other serious damage, do not expose this unit to the following conditions:

- Direct sunlight
- Heat sources
- Magnetic fields
- Extreme temperature or humidity
- Excessive dusty or dirty location
- High humidity or moisture
- Strong vibrations or shocks

FCC certification

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

Main Features

- Classic 60s sound, which takes you into the retro psychedelic trip
- Three effect modes: Chorus/Vibrato/Rotary
- Full metal shell
- True bypass switch
- Very small and compact design
- DC 9V adapter power supply


Explanation

Chorus: A high quality standard chorus, with warm and psychedelic chorus effect.

Vibrato: Vintage 60s vibrato sound, ensuring that a wide-range vibrato effect could be achieved.

Rotary: simulate the cabinet around you, bringing forth a fantastic rotary effect.

Panel Instruction

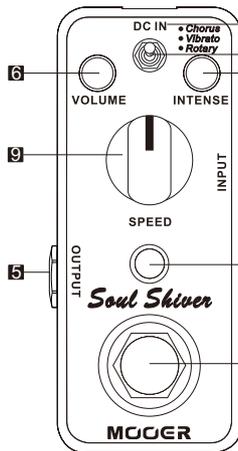

- 1. TRUE BYPASS Footswitch:**
Push down the footswitch to toggle between on and bypass status.
- 2. ON/OFF LED:**
Shows the on/off status of Soul Shiver, when the LED is lit the effect is engaged.
- 3. DC IN Power Jack:**
For power supply, use a 9-volt DC regulated AC adapter (plug polarity is positive on the barrel and negative in the center).
- 4. INPUT Jack:**
1/4" mono audio jack, for connecting guitar.
- 5. OUTPUT Jack:**
1/4" mono audio jack, outputs the signal.
- 6. VOLUME Knob:**
Adjusts the volume of effect.
- 7. Mode Switch:**
Choose the Chorus, Vibrato, Rotary mode.

- 8. INTENSE Knob:** Adjusts the tone of effect.
- 9. SPEED Knob:** Adjusts the speed of effect.

Specification

Input: 1/4" monaural jack (impedance: 470k Ohms)

Output: 1/4" monaural jack (impedance: 100 Ohms)

Power Requirements: AC adapter 9V DC (center minus plug), recommended to use Mooyer Micro Power

Current Draw: 128 mA

Dimensions: 93.5mm (D) x 42mm (W) x 52mm (H)

Weight: 150g

Accessories: Owner's Manual

** Disclaimer: Any specification's update won't be amended in this manual.*